



Ref #	Part Number	Qty.	Description
1	022339-000	5	SPRING
2	022340-000	1	HEATING ELEMENT.206 H.LIGHT 240V
3	022330-000	1	HEATING ELEMENT.155 H.LIGHT 240V
4	022319-000	6	LOCKING HOOK
5	022343-000	1	DOUBLE BOTTOM FOR CERAMIC COOKTOP TC 36
6	022322-000	4	SQUARE SUPPORT BOX
7	022325-000	1	POWER TERMINAL BLOCK
8	022333-000	4	ASSEMBY BRACKET FIXING
9	022329-000	1	ANGLED CONNECTOR (POWER CABLE ASSY)
10	022327-000	1	CONDUIT FOR CABLES PROTECTION
11	022323-000	5	SCREW FIXING ELECTRONIC CONTROL
12	022328-000	1	PLASTIC PROTECTION (POWER CABLE)
13	022321-000	1	SPACER FOR CERAMIC COKTOP 30/36
14	022342-000	1	BOX FOR CERAMIC COOKTOP TC 36
15	022320-000	20	SPRING CLIP, FIXING HEATING ELEMENT
16	022332-000	1	HEATING BRIDGE ELEMENT.175/175 H.LIGHT 240V
17	022331-000	1	HEATING ELEMENT.255/185/125 H.LIGHT 240V
18	022636-000	1	ELECTRONIC TOUCH CONTROL - 5B
19	022341-000	1	PERIMETRAL SEAL BLACK FOR CERAMIC COOKTOP 36
20	022726-000	1	GLASS COOKTOP ASSY.VIKING 36
NI	022324-000	1	SCRAPER
NI	022344-000	1	WIRING