



Ref #	Part Number	Qty.	Description
1	B2004103		REAR SUPT (VGWT240T)
2	PB020079		WOK TUBING ASSEMBLY
3	PB010208		BEZEL, CHROME PLATE
	PB010209		BEZEL BRASS
4	B2002701		INSULATION PANEL (VGWT240T)
5	B2001912		BURNER BOX SIDE LH (VGWT240T)
6	B2001911		BURNER BOX SIDE RH (VGWT240T)
7	B9204559		CONTROL PANEL (VGWT240T)
8	B2001160		DRIP TRAY GUIDE BRKT (VGWT240T)
9	PK000007		DRIP TRAY GUIDE - LH (VGRT)
10	PK000008		DRIP TRAY GUIDE - RH
11	B2005639		FRONT SUPPORT (VGWT240T)
12	G3004888		GRATE SUPT. FRAME (VGWT240T)
13	PE010142		3 LOGO XBKXXCHROME
	PE010143		3 LOGO BK/BR
14	PA010196		SUB TO 003544-000 - WOK VALVE
15	G3002719		LANDING LEDGE ASSY (VCCGG4)
16	B2002700		BURNER BOX BTM (VGWT240T)
17	PA050062		24 SQUARE MANIFOLD (VGWT240)
18	G3004936		REGULATOR ASSY - NAT (P1 GRILL)
	G3004937		REGULATOR ASSY - L.P. W/HOSE
19	B2001919		SIDE PANEL-RH (VGRT)
20	B2001920		SIDE PANEL-LH (VGRT)
21	B2005417		COUNTERTOP SIDE TRIME LH
22	B2005416		COUNTERTOP SIDE TRIM RH VGRT
23	B3002706		DRIP TRAY HANDLE (VCCGG4)
	C9302706PVD		DRIP TRAY HANDLE 24 PVD BRASS
24	PA010039		TOP GRILL KNOB XBKX (VGRC) (N/STYLE)
25	B2004104		WOK BURNER SUTP (VGWT240T)
26	B3002708		DRIP TRAY (VCCGG4)
27	PA030006		GRATE SUPT. RING XSSX (VGWT240)
28	PD040004		GROMMET BUMPER
29	G3204100		WOK BURNER ASSY (24 WOK)
30	B2004105		SPARK IGNITOR BRKT (VGWT240T)
31	PB040160		WOK IGNITER
32	B2004110		GRTATE SUTP CENTER
33	PA060044		CENTER GRATE (24 WOK)
34	PA060043		WOK GRATE
35	B3004108		GRATE SUPPORT FRAME WELD ASSY
36	G3004887		SUB TO G30012134 - GRATE SUTP OUTER FRAME (VGWT24...
NI	PM010043		CARBON STEEL WOK
NI	PM010044		WOK LID FOR PM010043
NI	PB010156		IGNITION SWITCH KNOB (BBQ GRILL) 1390-16
NI	PA020022		SINGLE OUTPUT IGNITION SWITCH-(VGBQ (1691.06)
NI	G5004200		LIGHTING WAND ASSY (VGBQ)
NI	G3204565		WOK OUTDOOR ISLAND TRIM ASSY
NI	B2003023		CABINET BACK TRIM - 24 (VCC-EQ4)
NI	G3205601		OUTDOOR WOK COVER ASSY